


EUREKA TANK STORAGE GUIDE




Handling

- Do not drop them from heights, drag them or hit them against walls or floors.
- Protect the connections and other system components during handling and storage.
- They must be lifted and transported by two persons.

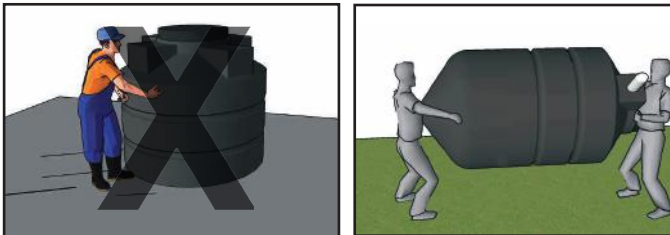


Protection

- Store tanks on a flat surface free of objects that will not damage the tank walls or floor.

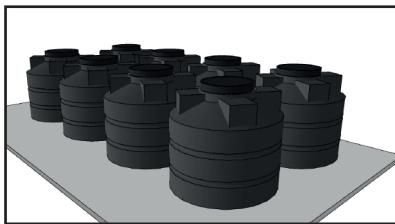


- Avoid storing tanks on mezzanine edges or places where they can fall and hit. Do not stack on more than two levels.

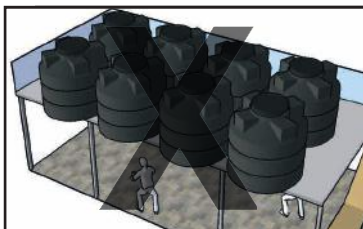


Stacking

WATER TANK

- Stack according to size in no more than two levels, placing the tanks between the two rows of lower levels. Do not stack on the lids of lower tanks.

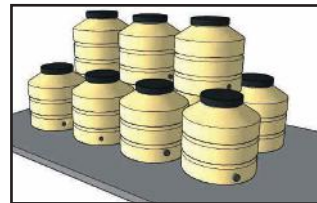



450-1100 liters

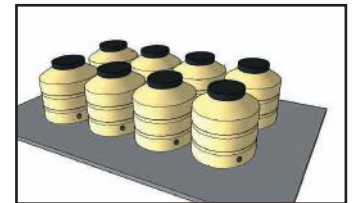

2500 liters

ECOFOSA

- Stack in no more than three levels in a horizontal position at ground level.

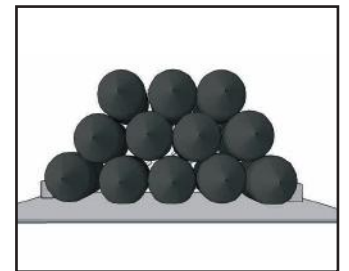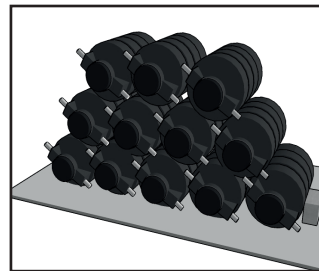

CISTERNA

- Stack at one level.

